







 
 










Programming

-  **P**rogramming
wireless control
-  **4**-Learn door
close force
-  **1**-Set door open
travel limit
-  Set **F**orce
level
-  **2**-Set door close
travel limit
-  *Flashing*
Erase
wireless control
-  **3**-Learn door
open force
-  **A**uto closer
activated

Troubleshoot

-  Remote
Locked
-  **C**ontinuous Flashing
Wall button wires
shorted
-  **O**ver**F**orce
-  Motor running
for **O**ver 30 sec
-  Safety beam
blocked

Connection

-  Safety Beam
-  Coloured Cable
-  Wall Console
-  White Cable
-  Backup Battery

Buttons

- SET
- Set / Learn
- ▲ Up
- ▼ Down

Please refer to the Installation Quick Guide/User Manual for programming details.