

Motion Alert

Model HA-434

1. INTRODUCTION

The Motion Alert is designed to monitor movement around your house. The motion sensor can be placed either indoor or outdoor. Once motion is detected, the receiver will beep & flash.

In this package, you should find an Indoor/Outdoor Motion Sensor, a Household Alert® Receiver, an adapter, ball-head joint, screws and a clip.





Please follow the instructions below to setup your motion sensor and the receiver.

2. SET UP CODE CONNECTORS AND ZONE CONNECTORS

1. CODE CONNECTORS

In order for the sensor to communicate with the receiver properly, the sensor's code must match with the receiver's code. Code connectors 1 to 6 can be found by opening the battery cover and the back cover of the receiver. User is required to set these code connectors randomly and the code settings on the sensor and receiver must be the same. Each position of the code connector can be set to "+", "-", or "0" position. Refer to the diagram below to set the code connectors properly. If the connector is placed on the top and middle posts, that column is set on "+". If the connector is placed on the middle and bottom posts, that column is set on "-". If the connector is removed completely, (not placed on any posts), it is set to "0". (see diagram for examples of how to set a column to the three different positions).

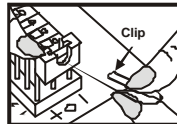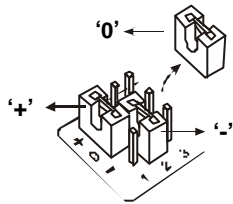

Note: A connector can be removed with the clip, as shown.



Code Connectors on Motion Sensor

Code Connectors on Receiver

Note: If you experience interference from a nearby system, which could accidentally trigger your system, please change the code settings on the sensor and receiver. The code setting on the sensor and receiver should still match after changing the code setting.

2. ZONE CONNECTORS

Each receiver can work with up to 4 different sensors (to represent 4 different zones on the receiver). There are 2 connectors that determine the zone number 1, 2, 3 and 4. These 2 connectors can be found by opening the battery cover. Please follow table 1 to set the zone.



Zone connectors

	A	B
Zone 1	+	+
Zone 2	+	-
Zone 3	-	+
Zone 4	-	-

Table 1

"+" in the table means the connector for that position should be placed on the posts.

"-" in the table means the connector for that position should be removed.

3. POWER UP THE HOUSEHOLD ALERT® RECEIVER AND INDOOR/OUTDOOR MOTION SENSOR

1. POWER UP

After setting up all the connectors properly, both units are now ready to be powered up.

Insert a 9V alkaline battery (not included) to the motion sensor and its LED will be on for 2 seconds. The receiver will beep and red LED flash. The sensor requires a warm up time of approx. 45 seconds before it can function properly. After powering up the sensor, face it to the wall where no motion will be detected. After 45 seconds, the sensor is ready. Wave your hand in front of the sensor, the receiver will beep and red LED will flash for approx. 15 seconds.

Plug in the adapter to the receiver, the green LED will start flashing indicating the receiver unit is powered up but no sensor is detected.



Plug in the adapter to the receiver



Insert 9V alkaline battery to the sensor

2. SENSOR SENSITIVITY

The sensitivity of the motion sensor is adjustable. Change the setting by placing the connector on either the "High" or "Low" position. When the sensitivity is set to "Low", more movement is required to trigger the sensor. It is recommended to set the sensitivity to "Low" and perform a "Walk Test" (Described in Section 3 - "Walk Test"). If the walk test result is satisfied, the sensitivity does not require to be adjusted further. If the walk test result shows the sensitivity is too low, then you can change the sensitivity setting to "High". Please perform the walk test after changing the sensitivity setting.



Sensitivity Connectors on Motion Sensor

3. MOUNTING

A ball-head joint is necessary to mount the sensor at a desired location. A height of 5-6 ft is recommended, depending on your application. Once a location is selected, mount the ball-head joint to this location by screws provided, (see diagram 1). Once the ball-head joint is mounted to the wall, slide the back of the sensor into the ball-head joint (see diagram 2). The mounting angle can be adjusted. Please refer to Section 3 "Walk Test" to determine the best mounting angle.



Diagram 1



Diagram 2

4. WALK TEST

After mounting the sensor at the desired location, it is important to perform a walk test in order to determine if the sensor is detecting the things you want to detect.




In order to control how far the sensor can "see", this can be done by adjusting the angle of the sensor. To reduce the detection range, simply move the sensor downward. To increase the range, move the sensor up to around 12 degrees. This will give the maximum range. However, this may not be desired if the sensor is placed outdoors, since a false trigger may occur if the sensor is set to detect motion in a distance.

3. POWER UP THE HOUSEHOLD ALERT® RECEIVER AND INDOOR/ OUTDOOR MOTION SENSOR (CONT)

You should walk in the area that you would like the sensor to monitor. The receiver will beep if the sensor detects your movement. If the receiver does not respond, adjust the mounting angle accordingly. Perform the walk test again after 30 seconds. Repeat this procedure until your motion is detected. There should be no movement in the detected area during the 30 seconds.

Perform walk test in the undesired area to ensure movement cannot be detected.

Tips: The sensor should not face towards direct sunlight, placing near heat or cold producing devices (i.e. A/C or furnace vents, fans, ovens, heaters etc.) that may cause false triggers.

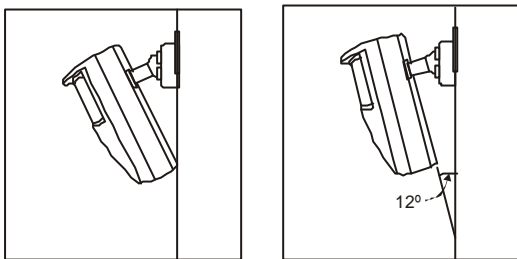

4. OPERATION

When motion is detected in the monitored area, the sensor will send a signal to the receiver. It will beep and the corresponding zone red LED will flash for 15 seconds.

If the sensor is set to zone 1, zone 1 red LED on the receiver will flash, and the receiver will emit a continuous "single beep", i.e. "beep" pause, "beep", pause..... etc.

If the sensor is set to zone 4, zone 4 red LED will flash, and the receiver will emit a continuous "4 beeps", i.e. "beep beep beep beep" pause "beep beep beep beep" pauseetc.

By the number of beeps emitted by the receiver, user can identify which zone is triggered.

5. BUZZER VOLUME

You can select the buzzer volume by switching the volume switch to "HI" or "LO" position.

The buzzer can be disabled by switching to the "OFF" position.



6. MUTE

When a sensor is triggered for a long period of time, you may stop the buzzer by pressing the mute button. When another signal comes again, you can disable the buzzer for all currently activated sensors by pressing the mute button. The receiver will beep again if it receives another signal.

For instance, if you are working in your garage, you may want to disable the buzzer for this garage only. Then you can press the "Mute" button after it starts to sound. If any other sensor is triggered, the receiver will sound again.



7. LOSS OF SIGNAL INDICATION

When the battery level on the sensor drops to a certain level, or the sensor is out of the operating range, the receiver will show a "loss of signal" indication. The red LED representing that zone will flash rapidly, i.e. if zone 1 sensor is lost, the zone 1 red LED will flash rapidly.

When the loss of signal indication occurs, move the receiver closer to the corresponding sensor and trigger that sensor. If the red LED stops flashing rapidly, that means the receiver or sensor needs to be relocated. If the "loss of signal" indication persists, replace the battery of that sensor.

8. OTHER HOUSEHOLD ALERT® SENSORS

The Household Alert® receiver can work with up to 4 different sensors: garage door monitor sensors, door / window sensors, water sensors, indoor/outdoor motion sensors, etc. Please visit www.skylinkhome.com or contact us at support@skylinkhome.com for more information of how to fully utilize your Motion Alert.



9. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

10. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ website at www.skylinkhome.com , or
2. email us at support@skylinkhome.com



CAPITAL PROSPECT LTD.

Rm.1303, 13/F, Block B, Veristrong Ind. Centre,
36 AuPuiWan Street, Fo Tan, Hong Kong
Tel: +852 2602-1318 Fax: +852 2602-4684
Email: support@skylinkhome.com
<http://www.skylinkhome.com>
P/N. 101A259-001 Rev.1
©2005 SKYLINK GROUP